

- 5 Press **▲/▼/◀▶** and **OK** to set the time/date, and then press **OK** to confirm.



- When the reminder alerts, you can press any button to stop this reminder. To set the function, press the same button twice.

Set on/off a reminder

- 1 In the main menu, select [Setup] and then press **OK** to confirm.
- 2 Select [Event Reminder], and then press **OK** to confirm.
- 3 Select a reminder, and then press **OK** to confirm.
- 4 Select [Set], and then press **OK** to confirm.
- To set the reminder on, select [On], and then press **OK** to confirm.
 - To set the reminder off, select [Off] and then press **OK** to confirm.



- **Weekday:** Monday 00:00 to Friday 23:59
- **Weekend:** Saturday 00:00 to Sunday 23:59

Set display auto on/off by time

PhotoFrame will turn on or off the display automatically.



- Ensure that you set the current time and date of the PhotoFrame before you set the auto on/off function.

- 1 In the main menu, select [Setup] and then press **OK** to confirm.
- 2 Select [Smart power], and then press **OK** to confirm.
- 3 Select [Set time], and then press **OK** to confirm.

Frequently asked questions

Is the LCD screen touch-enabled?

The LCD screen is not touch-enabled. Use the buttons on the back to control the PhotoFrame.

Will the LCD be damaged, if I keep showing the same photo for a long time?

No. The PhotoFrame can display the same photo continuously for 72 hours without any damage to the LCD screen.

Why does my PhotoFrame not show some of my photos?

The PhotoFrame supports only JPEG photos. Ensure that these JPEG photos are not damaged.

Why does the PhotoFrame not go into auto-off status after I set it?

Ensure that you set the current time, auto-off time, and auto-on time correctly. The PhotoFrame automatically turns off its display exactly at the auto-off time. If the time is not set correctly, it will not turn off the display for the day. It starts to enter auto-off status at the specified time from the next day.

The PhotoFrame is ON but the PhotoFrame does not respond anymore.

Ensure that the PhotoFrame is turned on. Then, use a pin to trigger the **RESET** button located on the back to restore the system.



© Royal Philips Electronics N.V. 2009

All rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

OSC_V2.0

Printed in China

PhotoFrame


SPF2017
SPF2027
SPF2047



Quick start guide

- 1** Get started
- 2** Play
- 3** Setup

 What's in the box

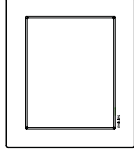

PhotoFrame



Stand



AC-DC power adaptor



CD-ROM (Digital User Manual)



Quick Start Guide



(For SPF2047)
Extra silver frame with design

PHILIPS ENG

1 Get started

Control buttons

Button	Function
○	Turn on/off the PhotoFrame.
⏮	Play slideshow Toggle between slideshow mode, and calendar mode.
⏪ ⏩ ⏴ ⏵	Select the previous/next/right/left item.
OK	Confirm a selection.
■	Enter/Exit photo menu.

Install the stand

To place the PhotoFrame on a flat surface, the stand must be attached to the back of the PhotoFrame.

1 Insert the stand into the PhotoFrame.



2 Screw the stand into the stand hole firmly.

Connect power

- When you position the PhotoFrame, ensure that the power plug and outlet are easily accessible.

→ Photos are displayed in slideshow mode.
For other times, press and hold ○ for more than 1 second.

1



→ Help message for control keys is displayed.

2

Press any button to exit the help message.
→ Photos are displayed in slideshow mode.

Connect a storage device

Caution

- Do not remove a storage device from the PhotoFrame when files are transferring from or to the storage device.

You can play JPEG photos in one of the following storage device which is connected to the PhotoFrame:


- Secure Digital (SD)
- Secure Digital (SDHC)
- MultiMedia Card
- Memory Stick
- Memory Stick Pro (with adaptor)
- USB memory drive

2

Available photo source are displayed, and then press OK to confirm.

However, we do not guarantee the PhotoFrame for all types of memory card media.

 1



Photos in the storage device are displayed in slideshow mode.

- To remove a storage device, pull it out from the PhotoFrame.

2 Play

Press and hold ○ for more than 1 second.

Display photos

Note

- You can play only JPEG photos on the PhotoFrame.

1

In the main menu, select [Photos] and then press OK to confirm.



Display collage photos

1

In the main menu, select [Slideshow] and then press OK to confirm.



2

Select [Collage] and then press OK to confirm.

3

Select [Multi], and then press OK to confirm.

4

Select a layout, and then press OK to confirm.

5

Press ◀ (Left) to select [Photo 1], and then press OK to confirm.

6

Press ▶ (Right) to select [Photo 2], and then press OK to confirm.

7

Select a photo from a photo source, and then press OK to confirm.

8

Repeat steps 5 to 7 until all photos are selected for the format.

9

Press ⏮ to start collage display, and then press OK to confirm.

10

Press ⏮ to stop collage display, select [Single], and then press OK to confirm.

11

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

12

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

13

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

14

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

15

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

16

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

17

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

18

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

19

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

20

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

21

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

22

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

23

Press ⏮ to confirm [Auto Fig./Radial/Color], and then press OK to confirm.

3 Setup

Select on-screen language

In the main menu, select [Setup] and then press OK to confirm.



1

Select [Language], and then press OK to confirm.

2

Select a language, and then press OK to confirm.

3

Select [Background Color], and then press OK to confirm.

4

Select [Background Color], and then press OK to confirm.

5

Select [Background Color], and then press OK to confirm.

6

Select [Background Color], and then press OK to confirm.

7

Select [Background Color], and then press OK to confirm.

8

Select [Background Color], and then press OK to confirm.

9

Select [Background Color], and then press OK to confirm.

10

Select [Background Color], and then press OK to confirm.

11

Select [Background Color], and then press OK to confirm.

12

Select [Background Color], and then press OK to confirm.

13

Select [Background Color], and then press OK to confirm.

14

Select [Background Color], and then press OK to confirm.

15

Select [Background Color], and then press OK to confirm.

16

Select [Background Color], and then press OK to confirm.

17

Select [Background Color], and then press OK to confirm.

18

Select [Background Color], and then press OK to confirm.

19

Select [Background Color], and then press OK to confirm.

20

Select [Background Color], and then press OK to confirm.

21

Select [Background Color], and then press OK to confirm.

 
22

Select [Background Color], and then press OK to confirm.

Set time and date

1

In the main menu, select [Setup] and then press OK to confirm.



2

Select [Time and Date], and then press OK to confirm.

3

Select [Set time], and then press OK to confirm.

4

Press ▲/▼/⏪/⏩ and OK to enter the current time/date, and then press OK to confirm.

5

Select [Set date], and then press OK to confirm.

6

Select [Set date], and then press OK to confirm.

7

Select [Set date], and then press OK to confirm.

8

Select [Set date], and then press OK to confirm.

9

Select [Set date], and then press OK to confirm.

10

Select [Set date], and then press OK to confirm.

11

Select [Set date], and then press OK to confirm.

12

Select [Set date], and then press OK to confirm.

13

Select [Set date], and then press OK to confirm.

14

Select [Set date], and then press OK to confirm.

15

Select [Set date], and then press OK to confirm.

16

Select [Set date], and then press OK to confirm.

17

Select [Set date], and then press OK to confirm.

18

Select [Set date], and then press OK to confirm.

19

Select [Set date], and then press OK to confirm.

20

Select [Set date], and then press OK to confirm.

21

Select [Set date], and then press OK to confirm.

22

Select [Set date], and then press OK to confirm.

23

Select [Set date], and then press OK to confirm.



→ If you select [Auto Fig.], the PhotoFrame extends a photo to fill the screen with picture distortion.



→ If you select [Radial/Color], the PhotoFrame extends the color on the edges of a photo that is smaller than the full screen to fill the screen with a bar or aspect ratio distortion.



Set an event reminder

You can create a reminder for a special event, and you can also select a photo to be displayed at a selected time.

Tip

- Ensure that you set the current time and date of the PhotoFrame before you set an event reminder.

Note

- In the main menu, select [Setup] and then press OK to confirm.
- Select [Event Reminder], and then press OK to confirm.
- Select a reminder, and then press OK to confirm.

1

In the main menu, select [Setup] and then press OK to confirm.

2

Select [Event Reminder], and then press OK to confirm.

3

Select a reminder, and then press OK to confirm.

4

Select [Set time] / [Set date], and then press OK to confirm.

5

Select [Set time] / [Set date], and then press OK to confirm.

6

Select [Set time] / [Set date], and then press OK to confirm.

7

Select [Set time] / [Set date], and then press OK to confirm.

8

Select [Set time] / [Set date], and then press OK to confirm.

9

Select [Set time] / [Set date], and then press OK to confirm.

10

Select [Set time] / [Set date], and then press OK to confirm.

11

Select [Set time] / [Set date], and then press OK to confirm.

12

Select [Set time] / [Set date], and then press OK to confirm.

13

Select [Set time] / [Set date], and then press OK to confirm.

14

Select [Set time] / [Set date], and then press OK to confirm.

15

Select [Set time] / [Set date], and then press OK to confirm.